

## Corroless ACO TWIN PACK – MIXING INSTRUCTIONS

(formerly Acothane Twin Pack)

### 1 Remove outer wrapper

Either tear or cut with scissors, being careful not to pierce the inner pack.

### 2 Remove clip

Grip each end of the polyethylene sachet, (one end in each hand), and using reasonable force pull sharply apart. The clip and bar will spring off.

### 3 Mix

Hand mix the contents of the pack using fingers and thumbs of both hands, being sure to incorporate material in corners and around the edges. Mixing will take between 1 and 1½ minutes. Alternatively lay the sachet on a smooth horizontal surface and squeeze the material back and forth in the pack using the solid piece of plastic divider.



Push the contents to the acute angle of the package by using a squeezing motion or by rolling up the plastic bag.

### 4 Remove corner

Using scissors, cut off the acute angled corner. This will provide a dispensing cone, the size of cut determining the rate of flow.

### 5 Dispense

Lay the pack across the palm of the hand and hold with fingers and thumb. Offer the dispensing cone to the component and squeeze the mastic out of the bag with the other hand, starting at the back. Relaxing hand pressure will stop mastic flow when required.

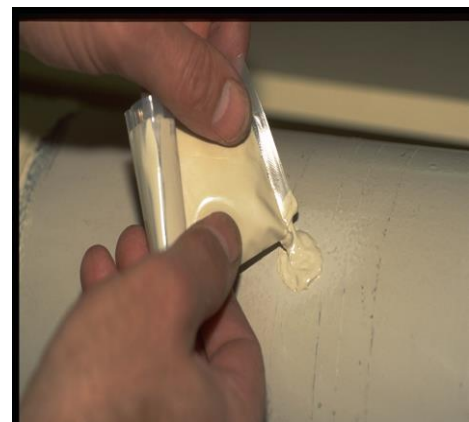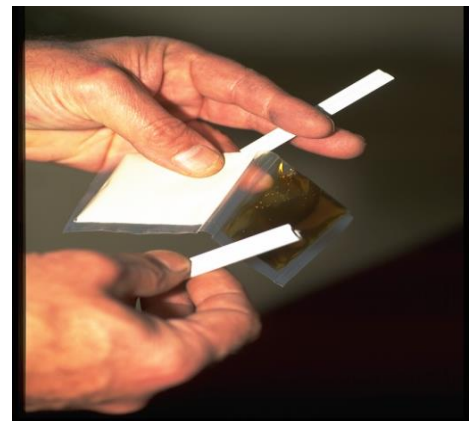

Issue date: March 2019